BATERÍA PORTÁTIL UNIVERSAL CARG-44A

MANUAL DE INSTRUCCIONES

INSTRUCCIONES DE SEGURIDAD:

- **Por favor lea estas instrucciones detenidamente, para su seguridad y para prevenir daños. La compañía no aceptará responsabilidad por daños causados por un mal uso o abuso de este producto.**

Por favor cargue completamente la batería antes de usarla.

- No tire este producto al fuego. Puede causar explosión.
- No coloque este producto en lugares con temperaturas altas, como microondas, el coche, luz solar directa durante un tiempo prolongado. Ni en zonas con humedad. Evite salpicaduras.
- No lo deje caer.
- No lo desmonte, eso invalidaría la garantía.
- No lo tire el producto ni la batería a la basura normal. Por favor consulte con su distribuidor habitual para que le informe sobre un centro de reciclado de batería.
- No lo sobrecargue y evite descargas frecuentes. Esto hará que la batería sufra.
- Manténgalo alejado de niños y de mascotas.
- La batería puede calentarse durante el funcionamiento. Es normal. De todas formas, para prevenir el sobrecalentamiento, manténgala ventilada y no le coloque nada encima o alrededor.
-

Especificaciones:

Tipo de batería: Li – Polímero

Capacidad: 4400mAh

Entrada/Salida: 5V 1A / 5V 1ª

Ciclos: 800

Tamaño: 11.8 * 6 * 1.8 cm, Peso: 110g

Temperatura de funcionamiento: -25°C ~ 60

Accesorios: Cable, micro USB, mini USB,

Manual Instrucciones

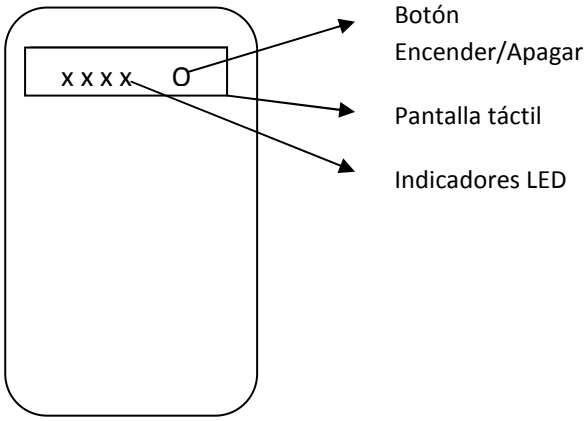

Como utilizar la batería:

1. En cualquier momento puede pulsar el símbolo Encender/Apagar para ver el estado de la batería.
2. Pulse y mantenga pulsado el símbolo Encender/Apagar durante 3 segundos para encender o apagar la batería.
3. Los 4 indicadores LED aparecerán dos veces como indicación que el aparato esté encendido o apagado.

UNIVERSAL POWER BANK CARG-44A
USER MANUAL

Important safety instructions

- **Please read the following instructions carefully for your safety and prevention of property damage.**

  The company cannot accept any liability for the damage caused by misuse or abuse of this product by users.

Please charge completely before using

- Do not throw this product into fire. It may cause the explosion.
- Do not place this product in high temperature place, such as microwave, your car or under direct sunlight for a long time and in humidity. Avoid direct contact with water.
- Do not drop this product from the high height.
- Do not disassemble this product. It will void the warranty.
- Do not dispose this product into the normal trash bin. Please consult your local distributor for the battery recycling center.
- Do not overcharge or avoid frequent full discharge of your Power Bank. This puts additional strain on the battery.
- Keep away from children or pets.
- Power bank may become warm during operations. This is normal. However to prevent overheating, keep power bank ventilated and do not place anything on or around the power bank.

Specification:

Battery type: Li – Polymer

Capacity: 4400mAh

Input/Output: 5V 1A / 5V 1A

Cycles: 800

Size: 11.8 * 6 * 1.8 cm, Weight: 110g

Operation temperature: -25°C ~ 60

Accessory: Cable, micro USB, mini USB, Manual

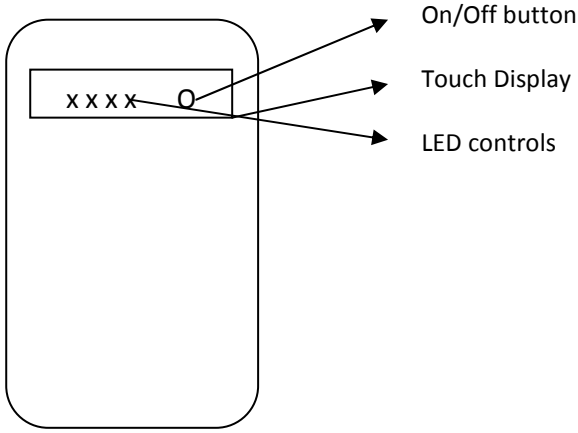

How to Use

1. Tap the power symbol on the touch panel to check the remaining power any time.
2. Tap and hold the power symbol for 3 seconds to power ON or OFF the device.
3. All 4 LEDs switch on in sequence twice to indicate the power is ON/OFF.